

Flash
Telecom

Cisco WRP400

El Cisco WRP400 es un router wireless que tiene dos puertos para teléfonos. Proporciona funcionalidad de router y funcionalidad de adaptador ip a analógico:


CONFIGURACIÓN DE LA VOZ

Debes conectar el Cisco a la misma red local que tu ordenador y acceder mediante navegando a <http://192.168.15.1/admin/voice/>

Usuario: admin

Password: admin



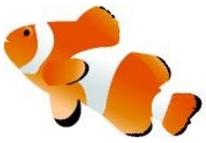

Flash
Telecom

Cisco WRP400

Entra en "Voice" y configura la "Line 1" con estos datos:

Proxy: sip.fmeuropa.com

Display name: el número que has contratado con nosotros

User ID: el usuario que te hemos enviado en la configuración IP

Password: la contraseña que te hemos enviado en la configuración IP

Haz clic en "Submit" para guardar los datos

The screenshot shows the Cisco WRP400 configuration interface. The top navigation bar includes "Voice", "Setup", "Wireless", "Security", "Access Restrictions", "Applications & Gaming", "Administration", "Status", and "Voice". The "Voice" section is expanded, showing sub-tabs for "Info", "System", "SIP", "Provisioning", "Regional", "Line 1", "Line 2", "User 1", and "User 2". The "Line 1" tab is selected, and the "SIP" sub-tab is active. The configuration fields are as follows:

Line Enable:	<input type="text" value="yes"/>	SAS DLG Refresh Intvl:	<input type="text" value="30"/>
SAS Enable:	<input type="text" value="no"/>	NAT Mapping Enable:	<input type="text" value="yes"/>
SAS Inbound RTP Sink:	<input type="text"/>	NAT Keep Alive Enable:	<input type="text" value="yes"/>